




- SHEET NOTES:
- 1 ALL FIRE ALARM EQUIPMENT AND PROTECTOWIRE ZONE BOXES SHALL BE PLACED IN A LOCATION SUCH THAT THEY ARE READILY ACCESSIBLE FOR MAINTENANCE AND TESTING. (TYPICAL TO ALL OPEN CEILING AREAS)
 - 2 FASTENERS SHOULD TYPICALLY BE SPACED EVERY 5-10 FEET, OR AS MAY BE NECESSARY TO PREVENT THE WIRE FROM SAGGING WHICH PUTS UNDUE STRESS ON THE WIRE AT THE FASTENING POINTS.

FIRE ALARM PLAN - FLOOR 1

SCALE: 1/8" = 1'-0"

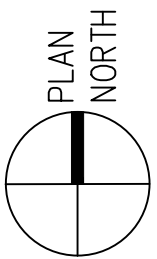

PROFESSIONAL SEAL (IF REVISION, APPLIES ONLY TO REVISED WORK)	ISSUE (PROGRESS, ESTIMATE, BID, CONSTRUCTION, CONFORMED, REVISION, RECORD)	AS BUILT — 08/28/13								74 FIRE ALARM SYSTEM 1ST FLOOR PLAN (PROTECTOWIRE)	DRAWN BY	DSV	DATE	08/28/13	
												CHECKED BY	LDD	DATE	09/03/2013
												APPROVED BY	MCD	DATE	09/03/2013
												SCALE AS NOTED			
												DRAWING NO.		SHEET	
												4B74E308			
												PROJECT NO. FN9200		7 OF 20	
			—	DSV	LDD	MCD	08/28/13	AS BUILT FROM A/E RECORD DWGS		UNIVERSITY OF CALIFORNIA LAWRENCE BERKELEY NATIONAL LABORATORY FACILITIES DIVISION					